


The contents of this document are Copyright © 2006 DDM Garage Doors. All Rights Reserved.

Unauthorized distribution or duplication is prohibited. This document may be printed or downloaded for personal reference only.

DDM Garage Doors' Web Site is <http://garagedoor.org/>.

EZ-Set Torsion Spring System Spring Replacement

- 1. Remove Cable Drum & EZ-Set Assembly from torsion tube**
- 2. Two tabs must be depressed to release the plug ear from the winding unit. The tabs are 180° apart and can only be accessed one at a time. (Fig 1)**

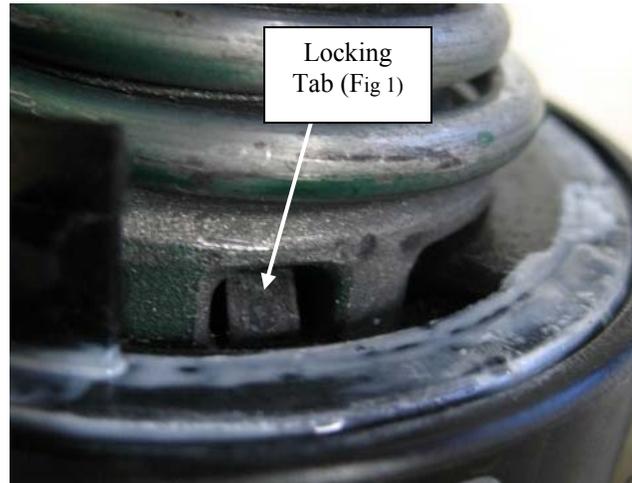

- 3. Insert flat blade screwdriver into the slot to depress the 1st locking tab. (Fig 2) Keep the screwdriver securely in place while rotating the screw on the winding unit to expose access to the 2nd locking tab. Insert the 2nd screwdriver into the slot. This will release the plug ear from the winding unit. (Fig 3)**





4. To remove spring from Plug Ear place the ears of the plug in a vice and with a spanner tool rotate the spring in the opposite direction of the spring wind. (Fig. 4)

