


# HOW TO INSTALL GARAGE DOOR OPENER BRACKET

<http://ddmgaragedoors.com/>



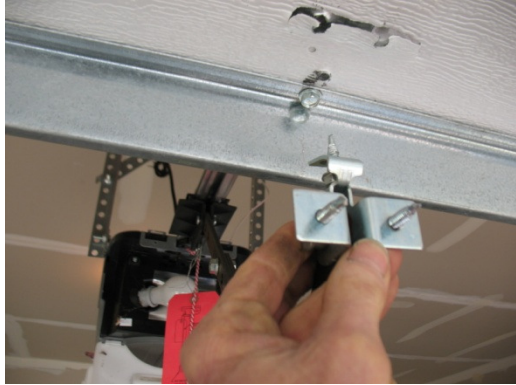

Unplug the garage door opener and remove the old bracket from the door. If the inside of the door is bent straighten the steel.

Remove the screws or nuts attached to the top half of the uppermost and center hinge on your garage door as shown. This will be the hinge located just under your original opener bracket.



Remove the screws from the center of the top strut just above your original bracket.

Slide the top of the opener bracket under the strut where you removed the screw earlier.





Next, line up the bottom of the bracket with the hinge below.

Line up the top of the bracket under the strut.  
Tap the bracket with a hammer if necessary.  
Check to make sure the bracket is plumb.



Secure the lower portion of the bracket **OVER** the hinge as shown, and secure with existing screws removed earlier.

Secure the top portion of the bracket as shown with existing screws or with self-drilling teks.





Secure the bottom of the opener arm to the opener bracket by sliding the pin through one of the holes in the bracket. Secure the pin with the pin keeper.

You will probably need to reset the travel on your opener. Adjust as needed.

***Copyright, DDM Garage Doors, 2012***

